

SPOT-Z Installation Guide



Keep SPOT-Z 4" away from metal

STEP 1



Plug the cord into the power adapter.

STEP 2



Plug the power adapter connector into the SPOT-Z.

Insert the plug in an 110V outlet.

STEP 3


Test The Silent Field



- Place a Generator within 30ft of the silent zone.
- Walk SLOWLY toward the SPOT-Z with a PAD. The PAD should sound the Danger alert signal (continuous) while outside the silent zone. Where the PAD goes silent is the edge of the SPOT-Z Field.

STEP 4

Change The Silent Field Size

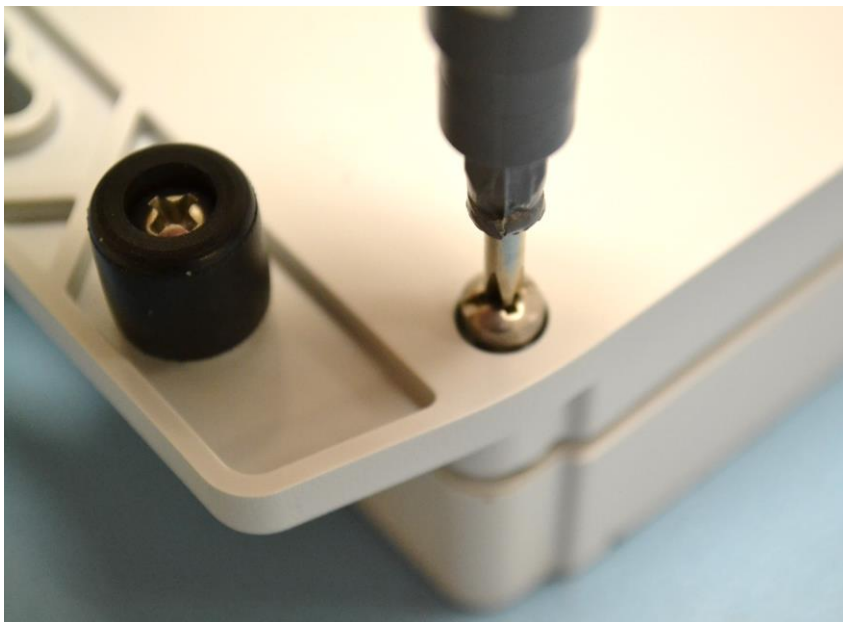


- Unplug the SPOT-Z.
- Unscrew the 4 bottom plate screws.
- Field Size
 - Horizontal (Desktop)
25" minimum
10 ' maximum
 - Vertical (Wall mount)
32" minimum
12.5' maximum


Keep SPOT-Z 4" away from metal

STEP 5

Change The Silent Field Size

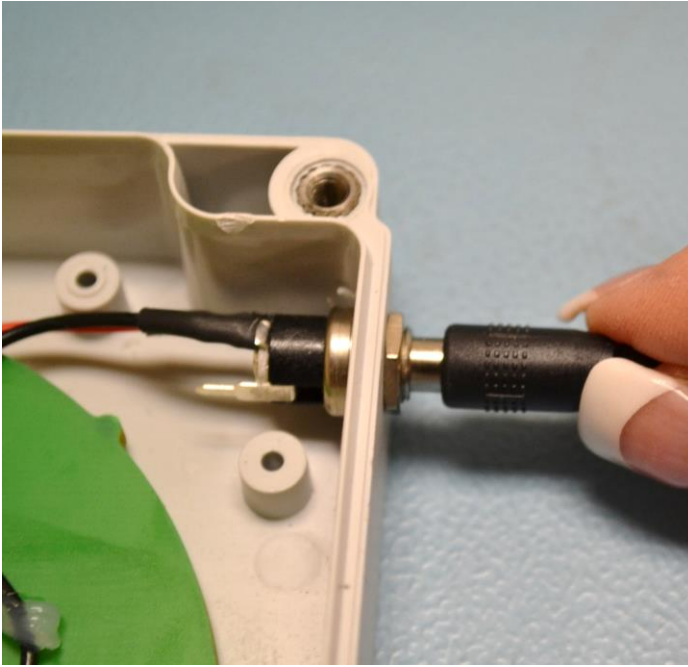

- Plug in the SPOT-Z.
- Place the PAD at the distance for the silent zone.
- Place a generator within 30 ft of the SPOT-Z.

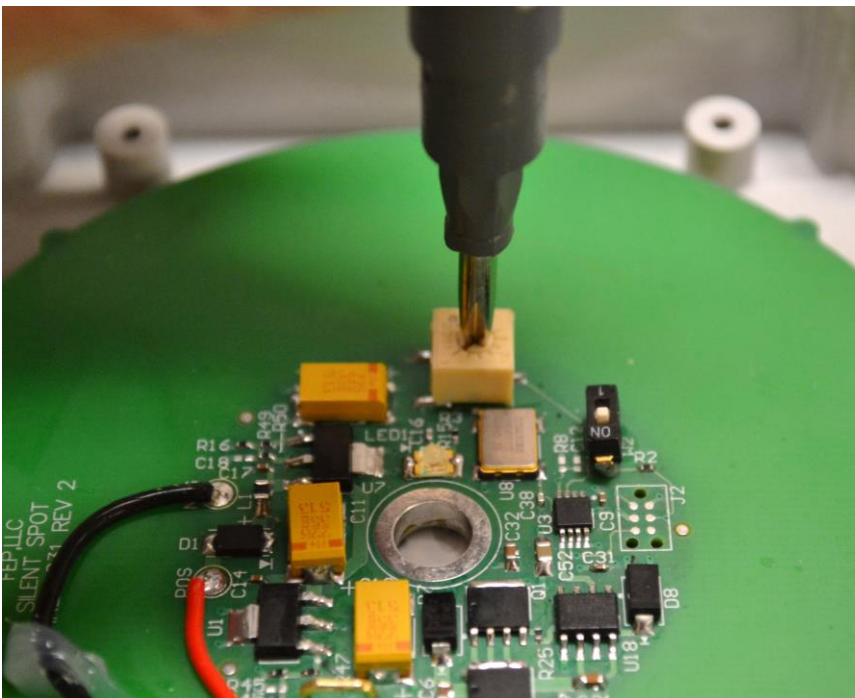

- Turn the PWM pot SLOWLY with a #1 Phillips head screw driver. DO NOT GO PAST THE “STOP”!
- Turn clockwise to increase the field, and turn counterclockwise to decrease the field.
- The PAD will silence/alarm when the edge of the field has been changed.

Keep SPOT-Z 4” away from metal